

LINCOLN OIL Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	OIL
Aviator	2003-2005	●

OIL Function List

Reset the oil change indicator

Reset Maintenance Lamp

Data Reset

Maintenance Version Status

LINCOLN SAS Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	SAS
Aviator	2003-2005	●
Continental	2017-2019	●
LS	2000-2005	●
MKC	2015-2019	●
MKT	2010-2019	●
MKX	2007-2010	●
MKX	2011-2019	●
MKZ	2007-2012	●
MKZ	2013-2019	●
Navigator	1999-2014	●
Zephyr	2007-2012	●

SAS Function List

ESP - Configure Steering Angle Sensor

IVD (Interactive Vehicle Dynamic Feature) Initialization Sequence

Braking - Steering Angle Sensor Calibration

Steering Wheel Position Sensor Calibration

EPS - Calibrate Steering Angle Sensor

EPS - Steering Column Assembly Configuration

EPS - Intermediate Shaft Configuration

EPS - Pull Drift Compensation

EPS - Pull Drift Compensation Enable / Disable

EPS - Straight Ahead Adaption Angle Reset

EPS - Steering Rack Limiter Configuration

Steering Torque Sensor Trim

AFS - Steering Wheel Angle Trim

AFS - Reset SASM Module

AFS - Steering Motor Angle Trim

AFS - Steering Toe Adjustment

LINCOLN SIT Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	SIT
Aviator	2003-2005	●
Continental	2017-2019	●
LS	2000-2005	●
Mark LT	2006-2008	●
MKS	2009-2012	●
MKS	2013-2016	●
MKT	2010-2019	●
MKX	2007-2010	●
MKX	2011-2019	●
MKZ	2007-2012	●
MKZ	2013-2019	●
Navigator	1999-2004	●
Town Car	1995-2011	●
Zephyr	2007-2012	●

SIT Function List

Passenger Seat Weight Sensor Resetting

Driver's Seat Module

Calibrate Power Seat

Test Passenger Zero Seat Weight

DSM Reset

LINCOLN SPS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	SPS
Continental	2017-2019	●
MKC	2015-2019	●
MKX	2011-2019	●
Navigator	2005-2014	●
Town Car	1995-2011	●

SPS Function List

Ride Height Calibration

Pneumatic Test

Accurate Trim Test

LINCOLN TPM Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	TPM
MKC	2015-2019	●
MKX	2011-2019	●
MKZ	2013-2019	●

TPM Function List

Reset TPMS

Reset TPMS After ABS Module Replacement

TPMS Function - Workshop Test

TPMS Functions

TPMS Functions - Sensor Learning Routine

TPMS Sensor Training Mode

TPMS Reset

LINCOLN BLD Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	BLD
Aviator	2003-2005	●
Blackwood	2002-2003	●
LS	2000-2005	●
Mark VIII	1996-1998	●
Mark LT	2006-2008	●
MKS	2009-2012	●
MKS	2013-2016	●
MKT	2010-2019	●
MKX	2007-2010	●
MKZ	2007-2012	●
Navigator	1999-2014	●
Town Car	1995-2011	●
Zephyr	2007-2012	●

BLD Function List

ABS Service Bleeding

ABS/ESP Service Bleeding

Bleed Master Cylinder

LINCOLN BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	BMS
Continental	2017-2019	●
MKC	2015-2019	●
MKS	2013-2016	●
MKT	2010-2019	●
MKX	2011-2019	●
MKZ	2013-2019	●

BMS Function List

R-mode Rebalance

BMS (Battery Monitoring System) Resetting

LINCOLN Diagnostic Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	Systemlist	EcuInfo.	ReadCodes	EraseCodes	LiveData	ActTest
Aviator	2003-2005	RCM	●	●	●	●	●
Aviator	2003-2005	ABS/TCS	●	●	●	●	●
Aviator	2003-2005	NAV	●	●	●	●	※
Aviator	2003-2005	VSM	●	●	●	●	●
Aviator	2003-2005	PCM	●	●	●	●	●
Aviator	2003-2005	EATC	●	●	●	●	※
Aviator	2003-2005	PAM	●	●	●	●	※
Aviator	2003-2005	IC	●	●	●	●	※
Aviator	2003-2005	4X4	●	●	●	●	※
Aviator	2003-2005	DSM	●	●	●	●	※
Aviator	2003-2005	DCSM	●	●	●	●	※
Aviator	2003-2005	PCSM	●	●	●	●	※
Aviator	2003-2005	TPM	●	●	●	●	※
Aviator	2003-2005	VAPS	●	●	●	●	※
Aviator	2020-2021	RCM	●	●	●	●	●
Aviator	2020-2021	ABS/TCS	●	●	●	●	●
Aviator	2020-2021	NAV	●	●	●	●	※
Aviator	2020-2021	VSM	●	●	●	●	●
Aviator	2020-2021	PCM	●	●	●	●	●
Aviator	2020-2021	EATC	●	●	●	●	※
Aviator	2020-2021	PAM	●	●	●	●	※
Aviator	2020-2021	IC	●	●	●	●	※
Aviator	2020-2021	4X4	●	●	●	●	※
Aviator	2020-2021	DSM	●	●	●	●	※
Aviator	2020-2021	DCSM	●	●	●	●	※
Aviator	2020-2021	PCSM	●	●	●	●	※
Aviator	2020-2021	TPM	●	●	●	●	※
Aviator	2020-2021	VAPS	●	●	●	●	※
Blackwood	2002-2003	RAP	●	●	●	●	※
Blackwood	2002-2003	ABS/TCS	●	●	●	●	●
Blackwood	2002-2003	HEC	●	●	●	●	※
Blackwood	2002-2003	PCM	●	●	●	●	●
Blackwood	2002-2003	GEM	●	●	●	●	※
Blackwood	2002-2003	EATC	●	●	●	●	※
Blackwood	2002-2003	DSM	●	●	●	●	※
Blackwood	2002-2003	PAM	●	●	●	●	※
Blackwood	2002-2003	RCM	●	●	●	●	●
Blackwood	2002-2003	RASM	●	●	●	●	※
Blackwood	2002-2003	LTM	●	●	●	●	※
Continental	2017-2020	SECM	●	●	●	●	●

Continental	2017-2020	SASM	●	●	●	●	●
Continental	2017-2020	DDM	●	●	●	●	●
Continental	2017-2020	PDM	●	●	●	●	●
Continental	2017-2020	BCMII	●	●	●	●	●
Continental	2017-2020	VDM	●	●	●	●	●
Continental	2017-2020	DSM	●	●	●	●	●
Continental	2017-2020	PCM	●	●	●	●	●
Continental	2017-2020	ABS	●	●	●	●	●
Continental	2017-2020	RHVAC	●	●	●	●	●
Continental	2017-2020	GFM	●	●	●	●	※
Continental	2017-2020	SOD-L	●	●	●	●	※
Continental	2017-2020	SOD-R	●	●	●	●	※
Continental	2017-2020	SCCM	●	●	●	●	※
Continental	2017-2020	IPC	●	●	●	●	●
Continental	2017-2020	HUD	●	●	●	●	※
Continental	2017-2020	DCDC	●	●	●	●	※
Continental	2017-2020	DCM-E	●	●	●	●	※
Continental	2017-2020	DCM-F	●	●	●	●	※
Continental	2017-2020	DCM-G	●	●	●	●	※
Continental	2017-2020	DCM-H	●	●	●	●	※
Continental	2017-2020	FCIM	●	●	●	●	※
Continental	2017-2020	PAM	●	●	●	●	※
Continental	2017-2020	SCM-C	●	●	●	●	※
Continental	2017-2020	SCM-D	●	●	●	●	※
Continental	2017-2020	RACM	●	●	●	●	※
Continental	2017-2020	RCM	●	●	●	●	※
Continental	2017-2020	PSCM	●	●	●	●	●
Continental	2017-2020	GWM	●	●	●	●	※
Continental	2017-2020	BECM-B	●	●	●	●	※
Continental	2017-2020	DSP	●	●	●	●	※
Continental	2017-2020	DACM-C	●	●	●	●	※
Continental	2017-2020	ACM	●	●	●	●	●
Continental	2017-2020	BCM-B	●	●	●	●	※
Continental	2017-2020	TCU1	●	●	●	●	※
Continental	2017-2020	DSM	●	●	●	●	※
Continental	2017-2020	SCM-B	●	●	●	●	※
Continental	2017-2020	SCM-E	●	●	●	●	※
Continental	2017-2020	SCM-F	●	●	●	●	※
Continental	2017-2020	APIM	●	●	●	●	※
Continental	2017-2020	HSWM	●	●	●	●	※
Continental	2017-2020	RGTM	●	●	●	●	※
Continental	2017-2020	GSM	●	●	●	●	※
Continental	2017-2020	SCM-G	●	●	●	●	※
Continental	2017-2020	SCM-H	●	●	●	●	※
Continental	2017-2020	RTM	●	●	●	●	※
LS	2000-2005	PCM	●	●	●	●	●
LS	2000-2005	NAV	●	●	●	●	●
LS	2000-2005	ABS/TCS	●	●	●	●	●
LS	2000-2005	DDM	●	●	●	●	●

LS	2000-2005	RCM	●	●	●	●	●
LS	2000-2005	DSM	●	●	●	●	●
LS	2000-2005	MC	●	●	●	●	※
LS	2000-2005	REM	●	●	●	●	※
LS	2000-2005	ACM	●	●	●	●	※
LS	2000-2005	GEM	●	●	●	●	※
LS	2000-2005	HEC	●	●	●	●	※
LS	2000-2005	EATC	●	●	●	●	※
LS	2000-2005	SCLM	●	●	●	●	※
LS	2000-2005	PAM	●	●	●	●	※
LS	2000-2005	DCSM	●	●	●	●	※
LS	2000-2005	PCSM	●	●	●	●	※
LS	2000-2005	EPB	●	●	●	●	※
Mark VIII	1996-1998	DDM	●	●	●	●	●
Mark VIII	1996-1998	ABS/TCS	●	●	●	●	●
Mark VIII	1996-1998	PCM	●	●	●	●	●
Mark VIII	1996-1998	MC	●	●	●	●	※
Mark VIII	1996-1998	EATC	●	●	●	●	※
Mark VIII	1996-1998	CPM	●	●	●	●	※
Mark VIII	1996-1998	SCIL	●	●	●	●	※
Mark VIII	1996-1998	PSM	●	●	●	●	※
Mark VIII	1996-1998	HEC	●	●	●	●	※
Mark VIII	1996-1998	DSM	●	●	●	●	※
Mark LT	2006-2008	PCM	●	●	●	●	●
Mark LT	2006-2008	RCM	●	●	●	●	●
Mark LT	2006-2008	ABS	●	●	●	●	●
Mark LT	2006-2008	VSM	●	●	●	●	※
Mark LT	2006-2008	PAM	●	●	●	●	※
Mark LT	2006-2008	HVAC	●	●	●	●	●
Mark LT	2006-2008	DSM	●	●	●	●	※
Mark LT	2006-2008	IC	●	●	●	●	※
Mark LT	2006-2008	4X4	●	●	●	●	※
MKC	2015-2019	ABS	●	●	●	●	●
MKC	2015-2019	IPM-A	●	●	●	●	※
MKC	2015-2019	BCMII	●	●	●	●	●
MKC	2015-2019	VDM	●	●	●	●	●
MKC	2015-2019	PCM	●	●	●	●	●
MKC	2015-2019	HCM	●	●	●	●	※
MKC	2015-2019	DACM-C	●	●	●	●	※
MKC	2015-2019	TRM	●	●	●	●	※
MKC	2015-2019	SOD-L	●	●	●	●	※
MKC	2015-2019	SOD-R	●	●	●	●	※
MKC	2015-2019	C-CM	●	●	●	●	※
MKC	2015-2019	BECM-B	●	●	●	●	※
MKC	2015-2019	PDM	●	●	●	●	※
MKC	2015-2019	DDM	●	●	●	●	※
MKC	2015-2019	SCCM	●	●	●	●	※
MKC	2015-2019	ACM	●	●	●	●	※
MKC	2015-2019	GWM	●	●	●	●	※

MKC	2015-2019	IPC	●	●	●	●	●
MKC	2015-2019	TCU1	●	●	●	●	※
MKC	2015-2019	RGTM	●	●	●	●	※
MKC	2015-2019	PSCM	●	●	●	●	※
MKC	2015-2019	APIM	●	●	●	●	※
MKC	2015-2019	HSWM	●	●	●	●	※
MKC	2015-2019	RCM	●	●	●	●	●
MKC	2015-2019	DSM	●	●	●	●	※
MKC	2015-2019	SCM-E	●	●	●	●	※
MKC	2015-2019	HUD	●	●	●	●	※
MKC	2015-2019	OCSM	●	●	●	●	※
MKC	2015-2019	TRCM	●	●	●	●	●
MKC	2015-2019	GSM	●	●	●	●	※
MKC	2015-2019	PAM	●	●	●	●	※
MKC	2015-2019	DSP	●	●	●	●	※
MKC	2015-2019	RTM	●	●	●	●	※
MKC	2015-2019	FCIM	●	●	●	●	※
MKS	2009-2012	ABS	●	●	●	●	●
MKS	2009-2012	GEM/SJB	●	●	●	●	※
MKS	2009-2012	ACM	●	●	●	●	●
MKS	2009-2012	PCM	●	●	●	●	●
MKS	2009-2012	C-CM	●	●	●	●	※
MKS	2009-2012	RFA	●	●	●	●	※
MKS	2009-2012	ACM	●	●	●	●	●
MKS	2009-2012	OCSM	●	●	●	●	※
MKS	2009-2012	4X4	●	●	●	●	※
MKS	2009-2012	DCSM	●	●	●	●	※
MKS	2009-2012	FDIM	●	●	●	●	※
MKS	2009-2012	SASM	●	●	●	●	※
MKS	2009-2012	DSM	●	●	●	●	※
MKS	2009-2012	HCM	●	●	●	●	※
MKS	2009-2012	FCIM	●	●	●	●	※
MKS	2009-2012	HVAC	●	●	●	●	●
MKS	2009-2012	APIM	●	●	●	●	※
MKS	2009-2012	ILCM	●	●	●	●	※
MKS	2009-2012	DSP	●	●	●	●	※
MKS	2009-2012	HUD	●	●	●	●	※
MKS	2009-2012	IPC	●	●	●	●	●
MKS	2009-2012	RCM	●	●	●	●	●
MKS	2009-2012	DDM	●	●	●	●	※
MKS	2009-2012	HCM-2	●	●	●	●	※
MKS	2009-2012	PAM	●	●	●	●	※
MKS	2009-2012	SOD-R	●	●	●	●	※
MKS	2009-2012	SOD-L	●	●	●	●	※
MKS	2009-2012	PSCM	●	●	●	●	※
MKS	2009-2012	GPSM	●	●	●	●	※
MKS	2013-2016	C-CM	●	●	●	●	※
MKS	2013-2016	RFA	●	●	●	●	※
MKS	2013-2016	IPM-A	●	●	●	●	※

MKS	2013-2016	ABS	●	●	●	●	●
MKS	2013-2016	OCSM	●	●	●	●	※
MKS	2013-2016	PCM	●	●	●	●	●
MKS	2013-2016	BCMII	●	●	●	●	●
MKS	2013-2016	GPSM	●	●	●	●	※
MKS	2013-2016	HSWM	●	●	●	●	※
MKS	2013-2016	ACM	●	●	●	●	※
MKS	2013-2016	DCSM	●	●	●	●	※
MKS	2013-2016	DSM	●	●	●	●	※
MKS	2013-2016	APIM	●	●	●	●	※
MKS	2013-2016	HUD	●	●	●	●	※
MKS	2013-2016	DDM	●	●	●	●	※
MKS	2013-2016	FCIM	●	●	●	●	※
MKS	2013-2016	SOD-L	●	●	●	●	※
MKS	2013-2016	HCM-2	●	●	●	●	※
MKS	2013-2016	SOD-R	●	●	●	●	※
MKS	2013-2016	RACM	●	●	●	●	※
MKS	2013-2016	DACM-C	●	●	●	●	※
MKS	2013-2016	RTM	●	●	●	●	※
MKS	2013-2016	PSCM	●	●	●	●	※
MKS	2013-2016	RCM	●	●	●	●	●
MKS	2013-2016	SCCM	●	●	●	●	※
MKS	2013-2016	VDM	●	●	●	●	※
MKS	2013-2016	PAM	●	●	●	●	※
MKS	2013-2016	HCM	●	●	●	●	※
MKS	2013-2016	DSP	●	●	●	●	※
MKS	2013-2016	HVAC	●	●	●	●	●
MKS	2013-2016	FCDIM	●	●	●	●	※
MKS	2013-2016	IPC	●	●	●	●	※
MKS	2013-2016	SCM-G	●	●	●	●	※
MKS	2013-2016	SCM-H	●	●	●	●	※
MKT	2010-2019	C-CM	●	●	●	●	※
MKT	2010-2019	VDM	●	●	●	●	※
MKT	2010-2019	RFA	●	●	●	●	※
MKT	2010-2019	ABS	●	●	●	●	●
MKT	2010-2019	IPM-A	●	●	●	●	※
MKT	2010-2019	OCSM	●	●	●	●	※
MKT	2010-2019	PCM	●	●	●	●	●
MKT	2010-2019	BCMII	●	●	●	●	●
MKT	2010-2019	GPSM	●	●	●	●	※
MKT	2010-2019	HSWM	●	●	●	●	※
MKT	2010-2019	PSCM	●	●	●	●	※
MKT	2010-2019	ACM	●	●	●	●	●
MKT	2010-2019	LTM	●	●	●	●	※
MKT	2010-2019	DSM	●	●	●	●	※
MKT	2010-2019	APIM	●	●	●	●	※
MKT	2010-2019	HUD	●	●	●	●	※
MKT	2010-2019	RHVAC	●	●	●	●	※
MKT	2010-2019	RCM	●	●	●	●	●

MKT	2010-2019	PCSM-2	●	●	●	●	※
MKT	2010-2019	DDM	●	●	●	●	※
MKT	2010-2019	FCIM	●	●	●	●	※
MKT	2010-2019	DCSM	●	●	●	●	※
MKT	2010-2019	SOD-L	●	●	●	●	※
MKT	2010-2019	SOD-R	●	●	●	●	※
MKT	2010-2019	RACM	●	●	●	●	※
MKT	2010-2019	RTM	●	●	●	●	※
MKT	2010-2019	SCCM	●	●	●	●	※
MKT	2010-2019	VDM	●	●	●	●	※
MKT	2010-2019	PAM	●	●	●	●	※
MKT	2010-2019	HCM	●	●	●	●	※
MKT	2010-2019	DSP	●	●	●	●	※
MKT	2010-2019	HVAC	●	●	●	●	●
MKT	2010-2019	IPC	●	●	●	●	●
MKX	2007-2010	RCM	●	●	●	●	●
MKX	2007-2010	IC	●	●	●	●	※
MKX	2007-2010	PCM	●	●	●	●	●
MKX	2007-2010	ACM	●	●	●	●	●
MKX	2007-2010	GEM/SJB	●	●	●	●	※
MKX	2007-2010	DSP	●	●	●	●	※
MKX	2007-2010	ABS	●	●	●	●	●
MKX	2007-2010	OCSM	●	●	●	●	※
MKX	2007-2010	DCSM	●	●	●	●	※
MKX	2007-2010	HCM	●	●	●	●	●
MKX	2007-2010	4X4	●	●	●	●	※
MKX	2007-2010	PAM	●	●	●	●	※
MKX	2007-2010	LTM	●	●	●	●	※
MKX	2007-2010	SASM	●	●	●	●	※
MKX	2007-2010	RETM	●	●	●	●	※
MKX	2007-2010	APIM	●	●	●	●	※
MKX	2007-2010	DSM	●	●	●	●	※
MKX	2007-2010	OCSM	●	●	●	●	※
MKX	2011-2021	SECM	●	●	●	●	※
MKX	2011-2021	ABS	●	●	●	●	●
MKX	2011-2021	SASM	●	●	●	●	※
MKX	2011-2021	IPM-B	●	●	●	●	※
MKX	2011-2021	BCMII	●	●	●	●	●
MKX	2011-2021	DSM	●	●	●	●	※
MKX	2011-2021	PCM	●	●	●	●	●
MKX	2011-2021	VDM	●	●	●	●	※
MKX	2011-2021	IPM-A	●	●	●	●	※
MKX	2011-2021	RCM	●	●	●	●	●
MKX	2011-2021	HCM	●	●	●	●	※
MKX	2011-2021	SCM-B	●	●	●	●	※
MKX	2011-2021	IPC	●	●	●	●	●
MKX	2011-2021	DSP	●	●	●	●	※
MKX	2011-2021	APIM	●	●	●	●	※
MKX	2011-2021	RGTM	●	●	●	●	※

MKX	2011-2021	BECM-B	●	●	●	●	※
MKX	2011-2021	PDM	●	●	●	●	※
MKX	2011-2021	DDM	●	●	●	●	※
MKX	2011-2021	RTM	●	●	●	●	※
MKX	2011-2021	FCIM	●	●	●	●	※
MKX	2011-2021	GWM	●	●	●	●	※
MKX	2011-2021	HSWM	●	●	●	●	※
MKX	2011-2021	SCCM	●	●	●	●	※
MKX	2011-2021	TCU1	●	●	●	●	※
MKX	2011-2021	TRM	●	●	●	●	※
MKX	2011-2021	ACM	●	●	●	●	●
MKX	2011-2021	DACM-C	●	●	●	●	※
MKX	2011-2021	SCM-E	●	●	●	●	※
MKX	2011-2021	HUD	●	●	●	●	※
MKX	2011-2021	OCSM	●	●	●	●	※
MKX	2011-2021	RACM	●	●	●	●	※
MKX	2011-2021	TRCM	●	●	●	●	※
MKX	2011-2021	GSM	●	●	●	●	※
MKX	2011-2021	SCM-G	●	●	●	●	※
MKX	2011-2021	SCM-H	●	●	●	●	※
MKX	2011-2021	C-CM	●	●	●	●	※
MKX	2011-2021	PSCM	●	●	●	●	※
MKX	2011-2021	SOD-L	●	●	●	●	※
MKX	2011-2021	SOD-R	●	●	●	●	※
MKX	2011-2021	PAM	●	●	●	●	※
MKZ	2007-2012	ABS	●	●	●	●	●
MKZ	2007-2012	GEM/SJB	●	●	●	●	※
MKZ	2007-2012	DSP	●	●	●	●	※
MKZ	2007-2012	IPC	●	●	●	●	●
MKZ	2007-2012	PCM	●	●	●	●	●
MKZ	2007-2012	ACM	●	●	●	●	●
MKZ	2007-2012	TCM	●	●	●	●	●
MKZ	2007-2012	OCSM	●	●	●	●	※
MKZ	2007-2012	4X4	●	●	●	●	※
MKZ	2007-2012	FDIM	●	●	●	●	※
MKZ	2007-2012	PAM	●	●	●	●	※
MKZ	2007-2012	DCSM	●	●	●	●	※
MKZ	2007-2012	DSM	●	●	●	●	※
MKZ	2007-2012	FCIM	●	●	●	●	※
MKZ	2007-2012	HCM	●	●	●	●	※
MKZ	2007-2012	APIM	●	●	●	●	※
MKZ	2007-2012	RCM	●	●	●	●	●
MKZ	2007-2012	DDM	●	●	●	●	※
MKZ	2007-2012	ILCM	●	●	●	●	※
MKZ	2007-2012	HVAC	●	●	●	●	●
MKZ	2007-2012	SOD-R	●	●	●	●	※
MKZ	2007-2012	SOD-L	●	●	●	●	※
MKZ	2007-2012	GPSM	●	●	●	●	※
MKZ	2013-2020	IPM-A	●	●	●	●	※

MKZ	2013-2020	DSM	●	●	●	●	※
MKZ	2013-2020	BCMII	●	●	●	●	●
MKZ	2013-2020	DDM	●	●	●	●	※
MKZ	2013-2020	PDM	●	●	●	●	※
MKZ	2013-2020	PCM	●	●	●	●	●
MKZ	2013-2020	ABS	●	●	●	●	●
MKZ	2013-2020	DACM-C	●	●	●	●	※
MKZ	2013-2020	SOD-L	●	●	●	●	※
MKZ	2013-2020	SOD-R	●	●	●	●	※
MKZ	2013-2020	SCCM	●	●	●	●	※
MKZ	2013-2020	DSP	●	●	●	●	※
MKZ	2013-2020	C-CM	●	●	●	●	※
MKZ	2013-2020	DCDC	●	●	●	●	※
MKZ	2013-2020	FCIM	●	●	●	●	※
MKZ	2013-2020	PSCM	●	●	●	●	※
MKZ	2013-2020	BECM-B	●	●	●	●	※
MKZ	2013-2020	RCM	●	●	●	●	●
MKZ	2013-2020	SCM-E	●	●	●	●	※
MKZ	2013-2020	VDM	●	●	●	●	※
MKZ	2013-2020	TCU1	●	●	●	●	※
MKZ	2013-2020	ACM	●	●	●	●	※
MKZ	2013-2020	IPC	●	●	●	●	●
MKZ	2013-2020	GWM	●	●	●	●	※
MKZ	2013-2020	APIM	●	●	●	●	※
MKZ	2013-2020	HCM	●	●	●	●	●
MKZ	2013-2020	HSWM	●	●	●	●	※
MKZ	2013-2020	GFM	●	●	●	●	※
MKZ	2013-2020	HUD	●	●	●	●	※
MKZ	2013-2020	OCSM	●	●	●	●	※
MKZ	2013-2020	RACM	●	●	●	●	※
MKZ	2013-2020	RGTM	●	●	●	●	※
MKZ	2013-2020	TRCM	●	●	●	●	※
MKZ	2013-2020	GSM	●	●	●	●	※
MKZ	2013-2020	SCM-G	●	●	●	●	※
MKZ	2013-2020	SCM-H	●	●	●	●	※
MKZ	2013-2020	PAM	●	●	●	●	※
MKZ	2013-2020	RTM	●	●	●	●	※
Nautilus	2016-2021	RHVAC	●	●	●	●	※
Nautilus	2016-2021	FCIM-B	●	●	●	●	※
Nautilus	2016-2021	ATCM	●	●	●	●	※
Nautilus	2016-2021	GFM	●	●	●	●	※
Nautilus	2016-2021	IPM-A	●	●	●	●	※
Nautilus	2016-2021	SCCM	●	●	●	●	※
Nautilus	2016-2021	DACM-C	●	●	●	●	※
Nautilus	2016-2021	PAM	●	●	●	●	※
Nautilus	2016-2021	RGTM	●	●	●	●	※
Nautilus	2016-2021	SCM-G	●	●	●	●	※
Nautilus	2016-2021	SCM-H	●	●	●	●	※
Nautilus	2016-2021	SOD-L	●	●	●	●	※

Nautilus	2016-2021	OCSM	●	●	●	●	※
Nautilus	2016-2021	SCM-B	●	●	●	●	※
Nautilus	2016-2021	GWM	●	●	●	●	※
Nautilus	2016-2021	ABS	●	●	●	●	●
Nautilus	2016-2021	DSP	●	●	●	●	※
Nautilus	2016-2021	BCM-B	●	●	●	●	※
Nautilus	2016-2021	IPM-B	●	●	●	●	※
Nautilus	2016-2021	BECM-B	●	●	●	●	※
Nautilus	2016-2021	PSCM	●	●	●	●	※
Nautilus	2016-2021	SOD-R	●	●	●	●	※
Nautilus	2016-2021	HCM	●	●	●	●	●
Nautilus	2016-2021	BCMII	●	●	●	●	●
Nautilus	2016-2021	RBM	●	●	●	●	※
Nautilus	2016-2021	ACM	●	●	●	●	※
Nautilus	2016-2021	DDM	●	●	●	●	※
Nautilus	2016-2021	FCIM	●	●	●	●	※
Nautilus	2016-2021	IPC	●	●	●	●	●
Nautilus	2016-2021	PDM	●	●	●	●	※
Nautilus	2016-2021	RTM	●	●	●	●	※
Nautilus	2016-2021	SCM-J	●	●	●	●	※
Nautilus	2016-2021	SUMB	●	●	●	●	※
Nautilus	2016-2021	TCU1	●	●	●	●	※
Nautilus	2016-2021	TRM	●	●	●	●	※
Nautilus	2016-2021	WACM	●	●	●	●	※
Nautilus	2016-2021	C-CM	●	●	●	●	※
Nautilus	2016-2021	VDM	●	●	●	●	※
Nautilus	2016-2021	SCM-E	●	●	●	●	※
Nautilus	2016-2021	DSM	●	●	●	●	※
Nautilus	2016-2021	TCM	●	●	●	●	●
Nautilus	2016-2021	PCM	●	●	●	●	●
Nautilus	2016-2021	GSM	●	●	●	●	※
Nautilus	2016-2021	DWNULL	●	●	●	●	※
Nautilus	2016-2021	APIM	●	●	●	●	※
Nautilus	2016-2021	RCM	●	●	●	●	●
Nautilus	2016-2021	HUD	●	●	●	●	※
Nautilus	2016-2021	RACM	●	●	●	●	※
Nautilus	2016-2021	TBC	●	●	●	●	※
Nautilus	2016-2021	TCCM	●	●	●	●	※
Nautilus	2016-2021	HSWM	●	●	●	●	※
Navigator	1999-2004	RCM	●	●	●	●	●
Navigator	1999-2004	VDM	●	●	●	●	※
Navigator	1999-2004	4X4	●	●	●	●	※
Navigator	1999-2004	VSM	●	●	●	●	※
Navigator	1999-2004	ABS/TCS	●	●	●	●	●
Navigator	1999-2004	PCM	●	●	●	●	●
Navigator	1999-2004	HEC	●	●	●	●	※
Navigator	1999-2004	PAM	●	●	●	●	※
Navigator	1999-2004	DSM	●	●	●	●	※
Navigator	1999-2004	EATC	●	●	●	●	※

Navigator	1999-2004	DCSM	●	●	●	●	※
Navigator	1999-2004	LTM	●	●	●	●	※
Navigator	1999-2004	TPM	●	●	●	●	※
Navigator	1999-2004	NAV	●	●	●	●	※
Navigator	2005-2014	VDM	●	●	●	●	※
Navigator	2005-2014	GEM/SJB	●	●	●	●	※
Navigator	2005-2014	ABS	●	●	●	●	●
Navigator	2005-2014	IC	●	●	●	●	※
Navigator	2005-2014	PCM	●	●	●	●	●
Navigator	2005-2014	TBC	●	●	●	●	※
Navigator	2005-2014	PRB	●	●	●	●	※
Navigator	2005-2014	RCU	●	●	●	●	※
Navigator	2005-2014	HVAC	●	●	●	●	●
Navigator	2005-2014	LTM	●	●	●	●	※
Navigator	2005-2014	ACM	●	●	●	●	●
Navigator	2005-2014	DSM	●	●	●	●	※
Navigator	2005-2014	TCCM	●	●	●	●	※
Navigator	2005-2014	DSP	●	●	●	●	※
Navigator	2005-2014	DCSM	●	●	●	●	※
Navigator	2005-2014	APIM	●	●	●	●	※
Navigator	2005-2014	ACM	●	●	●	●	●
Navigator	2005-2014	SDARS	●	●	●	●	※
Navigator	2005-2014	RCM	●	●	●	●	●
Navigator	2005-2014	PAM	●	●	●	●	※
Navigator	2005-2014	GPSM	●	●	●	●	※
Navigator	2015-2022	RHVAC	●	●	●	●	※
Navigator	2015-2022	FCIM-B	●	●	●	●	※
Navigator	2015-2022	ATCM	●	●	●	●	※
Navigator	2015-2022	GFM	●	●	●	●	※
Navigator	2015-2022	IPM-A	●	●	●	●	※
Navigator	2015-2022	SCCM	●	●	●	●	※
Navigator	2015-2022	DACM-C	●	●	●	●	※
Navigator	2015-2022	PAM	●	●	●	●	※
Navigator	2015-2022	RGTM	●	●	●	●	※
Navigator	2015-2022	SCM-G	●	●	●	●	※
Navigator	2015-2022	SCM-H	●	●	●	●	※
Navigator	2015-2022	SOD-L	●	●	●	●	※
Navigator	2015-2022	OCSM	●	●	●	●	※
Navigator	2015-2022	SCM-B	●	●	●	●	※
Navigator	2015-2022	GWM	●	●	●	●	※
Navigator	2015-2022	ABS	●	●	●	●	●
Navigator	2015-2022	DSP	●	●	●	●	※
Navigator	2015-2022	BCM-B	●	●	●	●	※
Navigator	2015-2022	IPM-B	●	●	●	●	※
Navigator	2015-2022	BECM-B	●	●	●	●	※
Navigator	2015-2022	PSCM	●	●	●	●	※
Navigator	2015-2022	SOD-R	●	●	●	●	※
Navigator	2015-2022	HCM	●	●	●	●	●
Navigator	2015-2022	BCMII	●	●	●	●	●

Navigator	2015-2022	RBM	●	●	●	●	※
Navigator	2015-2022	ACM	●	●	●	●	※
Navigator	2015-2022	DDM	●	●	●	●	※
Navigator	2015-2022	FCIM	●	●	●	●	※
Navigator	2015-2022	IPC	●	●	●	●	●
Navigator	2015-2022	PDM	●	●	●	●	※
Navigator	2015-2022	RTM	●	●	●	●	※
Navigator	2015-2022	SCM-J	●	●	●	●	※
Navigator	2015-2022	SUMB	●	●	●	●	※
Navigator	2015-2022	TCU1	●	●	●	●	※
Navigator	2015-2022	TRM	●	●	●	●	※
Navigator	2015-2022	WACM	●	●	●	●	※
Navigator	2015-2022	C-CM	●	●	●	●	※
Navigator	2015-2022	VDM	●	●	●	●	※
Navigator	2015-2022	SCM-E	●	●	●	●	※
Navigator	2015-2022	DSM	●	●	●	●	※
Navigator	2015-2022	TCM	●	●	●	●	●
Navigator	2015-2022	PCM	●	●	●	●	●
Navigator	2015-2022	GSM	●	●	●	●	※
Navigator	2015-2022	DWNULL	●	●	●	●	※
Navigator	2015-2022	APIM	●	●	●	●	※
Navigator	2015-2022	RCM	●	●	●	●	●
Navigator	2015-2022	HUD	●	●	●	●	※
Navigator	2015-2022	RACM	●	●	●	●	※
Navigator	2015-2022	TBC	●	●	●	●	※
Navigator	2015-2022	TCCM	●	●	●	●	※
Navigator	2015-2019	HSWM	●	●	●	●	※
Town Car	1995-2011	PCM	●	●	●	●	●
Town Car	1995-2011	RCM	●	●	●	●	●
Town Car	1995-2011	VDM	●	●	●	●	※
Town Car	1995-2011	ABS	●	●	●	●	●
Town Car	1995-2011	DDM	●	●	●	●	※
Town Car	1995-2011	LCM	●	●	●	●	※
Town Car	1995-2011	IC	●	●	●	●	※
Town Car	1995-2011	PAM	●	●	●	●	※
Town Car	1995-2011	RATC	●	●	●	●	※
Town Car	1995-2011	DSM	●	●	●	●	※
Town Car	1995-2011	HVAC	●	●	●	●	●
Town Car	1995-2011	LTM	●	●	●	●	※
Zephyr	2007-2012	ABS	●	●	●	●	●
Zephyr	2007-2012	GEM/SJB	●	●	●	●	※
Zephyr	2007-2012	DSP	●	●	●	●	●
Zephyr	2007-2012	IPC	●	●	●	●	●
Zephyr	2007-2012	PCM	●	●	●	●	●
Zephyr	2007-2012	ACM	●	●	●	●	●
Zephyr	2007-2012	TCM	●	●	●	●	●
Zephyr	2007-2012	OCSM	●	●	●	●	※
Zephyr	2007-2012	4X4	●	●	●	●	※
Zephyr	2007-2012	FDIM	●	●	●	●	※

Zephyr	2007-2012	PAM	●	●	●	●	※
Zephyr	2007-2012	DCSM	●	●	●	●	※
Zephyr	2007-2012	DSM	●	●	●	●	※
Zephyr	2007-2012	FCIM	●	●	●	●	※
Zephyr	2007-2012	HCM	●	●	●	●	●
Zephyr	2007-2012	APIM	●	●	●	●	※
Zephyr	2007-2012	RCM	●	●	●	●	●
Zephyr	2007-2012	DDM	●	●	●	●	※
Zephyr	2007-2012	IILCM	●	●	●	●	※
Zephyr	2007-2012	HVAC	●	●	●	●	●
Zephyr	2007-2012	SOD-R	●	●	●	●	※
Zephyr	2007-2012	SOD-L	●	●	●	●	※
Zephyr	2007-2012	GPSM	●	●	●	●	※

System List

4X4	4X4 Control Module
ABS	Anti-Lock Braking System
ABS/TCS	Anti-Lock Braking System/Traction Control Module
ACM	Audio Control Module
APIM	Accessory Protocol Interface Module
ATCM	All Terrain Control Module
BCM-B	Body Control Module B
BCMII	Body Control Module
BECEM-B	Battery Energy Control Module B
C-CM	Cruise-Control Module
CPM	Cellular Phone Module
DACM-C	Digital Audio Control Module C
DCDC	DC To DC Converter Control Module
DCM-E	Door Control Module E
DCM-F	Door Control Module F
DCM-G	Door Control Module G
DCM-H	Door Control Module H
DCSM	Driver/Dual Climate-Control Seat Module
DDM	Driver Front Door Module
DDM	Drivers Door Module
DSM	Driver Front Seat Module
DSM	Drivers Seat Module
DSP	Audio Digital Signal Processing Module
DWNULL	Rear Differential Control Module
EATC	Electronic Automatic Temperature Control
EPB	Electric Parking Brake
FCDIM	Front Control/Display Interface Module
FCIM	Front Controls Interface Module
FCIM-B	Front Controls Interface Module B
FDIM	Front Display Interface Module
GEM	Generic Electronic Module
GEM/SJB	Generic Electronic Module/Smart Junction Box
GFM	Generic Function Module
GPSM	Global Positioning System Module

GSM	Gear Shift Module
GWM	Gateway Module A
HCM	Headlamp Control Module
HCM-2	Headlamp Control Module 2B
HEC	Hybrid Electronic Cluster
HSWM	Heated Steering Wheel Module
HUD	Head Up Display
HVAC	Heating Ventilation Air Conditioning
IC	Instrument Cluster
ILCM	Interior Lighting Control Module
IPC	Instrument Panel Control Module
IPM-A	Image Processing Module A
IPM-B	Image Processing Module B
LCM	Lighting Control Module
LTM	Liftgate/Trunk Module
MC	Message Center Module
NAV	Navigation System
OCSM	Occupant Classification System Module
PAM	Parking Aid Module
PCM	Powertrain Control Module
PCSM	Passenger Climate-Control Seat Module
PCSM-2	Passenger Climate-Control Seat Module 2Rear
PDM	Passenger Front Door Module
PRB	Power Running Board
PSCM	Power Steering Control Module
PSM	Passenger Front Seat Module
RACM	Rear Audio Control Module
RAP	Remote Anti-Theft/Personality Module
RASM	Rear Air Suspension Module
RATC	Rear Air Temperature Control
RBM	Running Board Control Module
RCM	Restraint Control Module
RCU	Audio Rear Control Unit
REM	Rear Electronic Module
RETM	Rear Seat Entertainment Module
RFA	Remote Function Actuator
RGTM	Rear Gate/Trunk Module
RHVAC	Rear Heating Ventilation Air Conditioning
RTM	Radio Transceiver Module
SASM	Steering Angle Sensor Module
SCCM	Steering Column Control Module
SCIL	Steering Column/Instrument Panel/Lighting
SCLM	Steering Column Locking Module
SCM-B	Seat Control Module B
SCM-C	Seat Control Module C
SCM-D	Seat Control Module D
SCM-E	Seat Control Module E
SCM-F	Seat Control Module F
SCM-G	Seat Control Module G

SCM-H	Seat Control Module H
SCM-J	Seat Control Module J
SDARS	Satellite Digital Audio Receiver System
SECM	Steering Effort Control Module
SOD-L	Side Obstacle Detection Control Module - Left
SOD-R	Side Obstacle Detection Control Module - Right
SUMB	Suspension Control Module B
TBC	Trailer Brake Control Module
TCCM	Transfer Case Control Module
TCM	Transmission Control Module
TCU1	Telematic Control Unit Module
TPM	Tire Pressure Monitor
TRCM	Transmission Range Control Module
TRM	Trailer Module
VAPS	Variable Assist Power Steering
VDM	Vehicle Dynamics Module
VSM	Vehicle Security Module
WACM	Wireless Accessory Charging Module

LINCOLN DWR Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	DWR
Continental	2017-2019	●
MKZ	2013-2019	●

DWR Function List

Driver's Window Motor Test

Passenger's Window Motor Test

Initialize Power Window

Power Liftgate Initialization

Driver Side Power Window Initialization

Passenger Side Power Window Initialization

LPSDM And RPSDM Service Function

LINCOLN ETC Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	ETC
Continental	2017-2019	●
LS	2000-2005	●
Mark LT	2006-2008	●
MKC	2015-2019	●
MKS	2009-2012	●
MKS	2013-2016	●
MKT	2010-2019	●
MKX	2007-2010	●
MKX	2011-2019	●
MKZ	2007-2012	●
MKZ	2013-2019	●
Navigator	2005-2014	●
Town Car	1995-2011	●
Zephyr	2007-2012	●

ETC Function List

Reset the intake Air Throttle Valve Learned Values

Reset the Throttle Body Learned Values

Reset KAM(Keep Alive Memory)

Reset KAM(Keep Alive Memory) - PCM

ETB / EGR Initialization

ETB Check

Electronic Throttle Control

Reset KAM(Keep Alive Memory) - TCM

Reset KAM(Keep Alive Memory) - SOBDM-C

LINCOLN LAP Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year	LAP
Continental	2017-2019	●
MKX	2011-2019	●
MKZ	2013-2019	●

LAP Function List

Headlamp Alignment

LED Lamp Driver Module Initialization